

Installation Guide for MS-BAR10, MS-BAR11 & MS-BAR12

Parts List



Locking Bar



Locking Shackle



Shackle



Locking Pin



 
Cable Seal
MS-BAR11 & MS-BAR12



Cargo Door Seal
MS-BAR12


Step 1

Slide Shackle and Locking Shackle into place behind rods. Fits containers with rod spacing of 17.25 inch maximum.

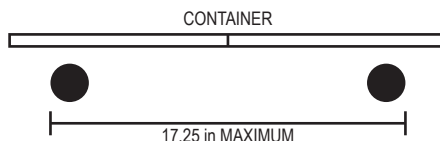

Step 2

 Slide Locking Bar through both Shackles.

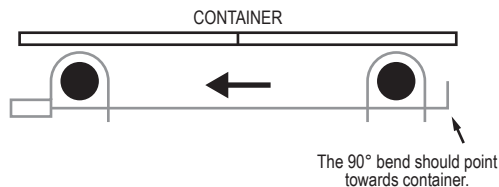


Step 3

Align hole in Bar over Lock. Manually press the Locking Pin into Lock. See Diagram below for proper orientations.

When locked properly, the Pin will be flush with the Lock Box as illustrated below. Usually the Pin can be installed manually with no tools.

 However, if the Pin is not flush, use a hammer to strike the pin until it is fully engaged and flush with the lock box.

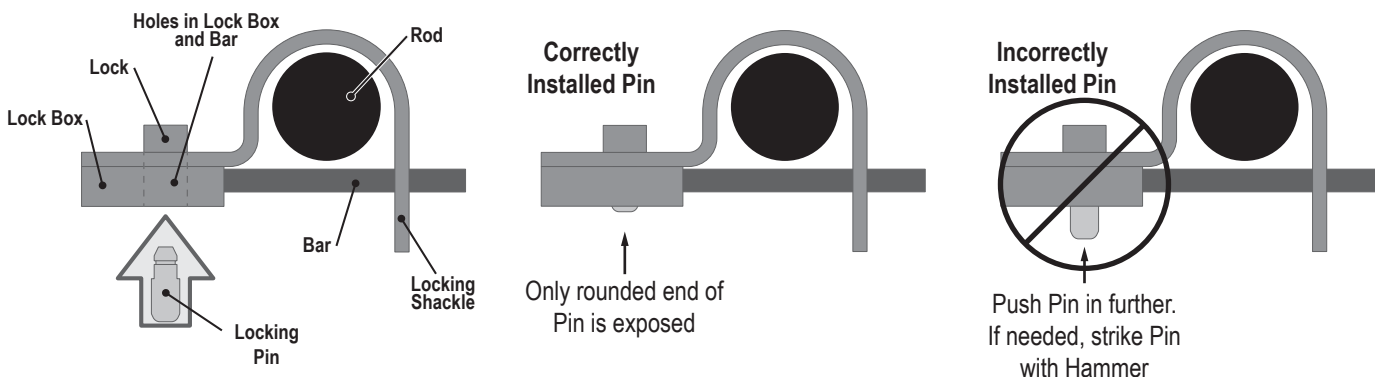

The MS-BAR10 is now installed, if you are installing MS-BAR11 or MS-BAR12, see other side.

Installation Guide for MS-BAR10, MS-BAR11 & MS-BAR12

 
Step 4

Loop Cable Seal through nearest Shackle, Door Latch and back through its housing to lock.




Step 5

Pull cable tight to remove slack. Cut any excess cable to prevent re-use.

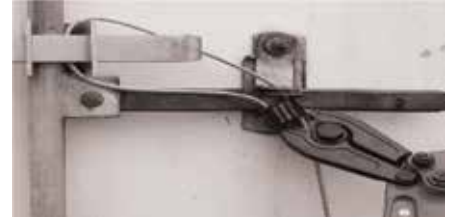

The MS-BAR11 is now installed. If you are installing the MS-BAR12, also reference the Installation Instructions for Cargo Door Seals.

 Removal Guide for MS-BAR10, MS-BAR11 & MS-BAR12

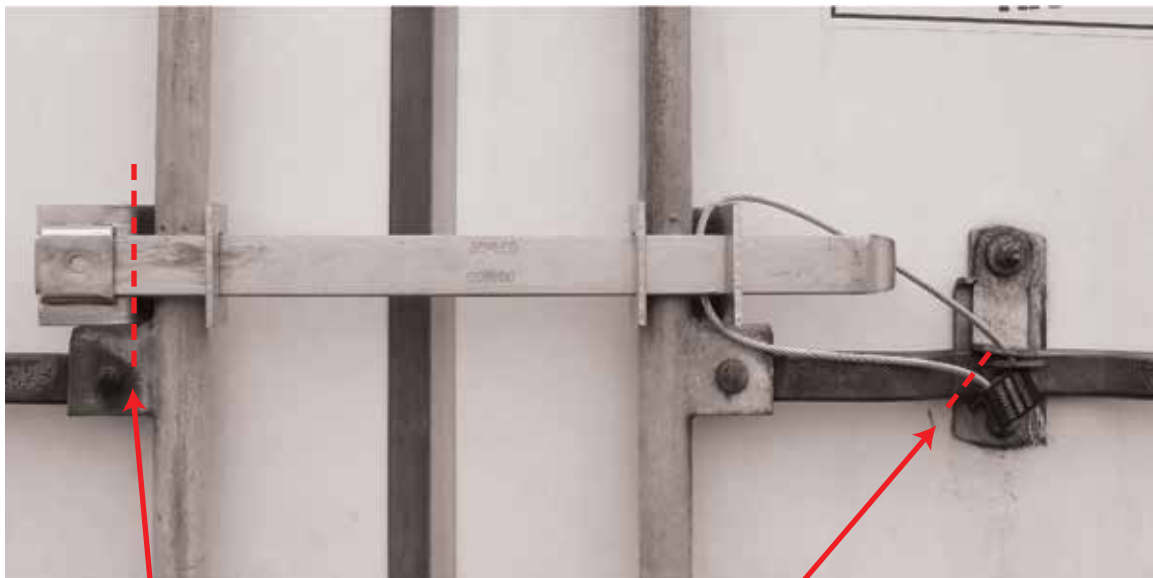

Cut Here with Wire Cutters

Cut Here with Angle Grinder

www.novavisioninc.com