

# Installation Guide MS-BAR9

## Before Beginning

Record serial numbers from all parts used. All MS-BAR9 parts use matching numbers. Any serial numbers from supplemental security should also be recorded.



## Parts List




Locking Bar



Shackles


## Step 1

Slide Shackles into place behind rods. Max rod spacing: 17.25 in.

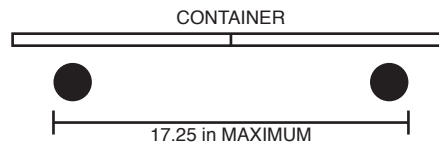

## Step 2

Slide Locking Bar through both Shackles.

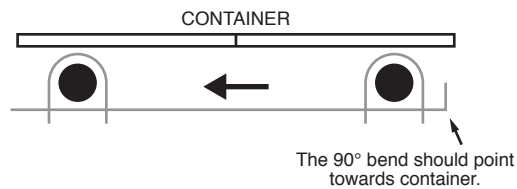

## Step 3

Attach Bolt Seal (recommended) or your own reusable lock to the hole in the Locking Bar.



## Step 4 (Optional)

If desired, Security Seals may be placed on reusable locks for additional security.



## MS-BAR9 is now installed.

## Step 5 (Removal)

Use Bolt Cutters to remove Bolt Seal, or remove your reusable lock as normal.

